


# INSTALLATION


## PANEL GLIDE SYSTEM

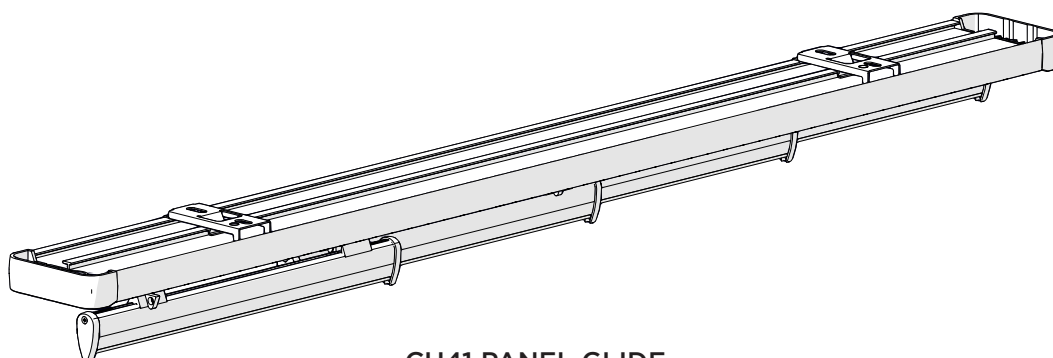


CU41 PANEL GLIDE

## INSTALLATION

SECURE TOP FIX BRACKETS EVERY 1000 - 1200MM

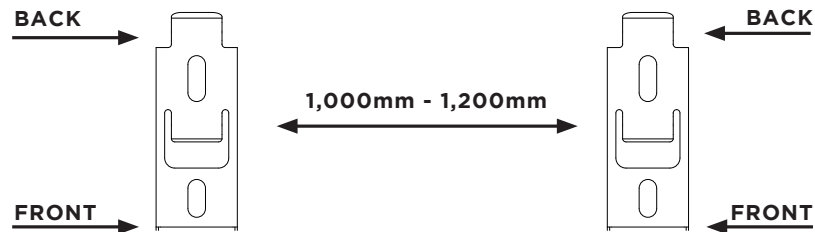


INSTALL PANEL GLIDE SYSTEM SHOWN BELOW INTO BRACKETS

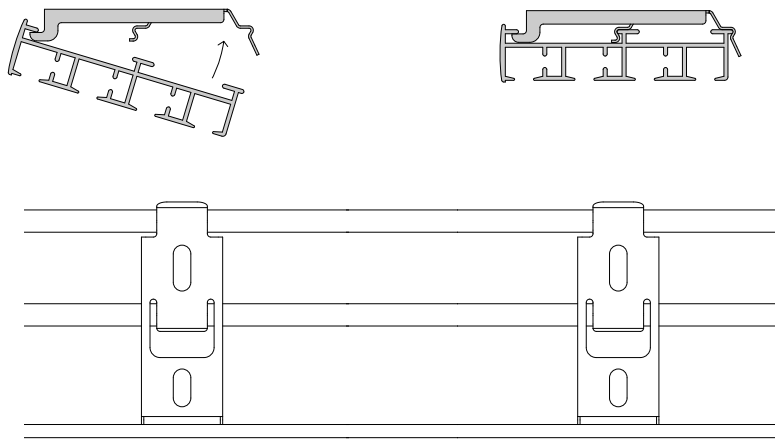

### STEP 3 - ATTACH FABRIC TO PANEL BARS.

Insert the fabric as detailed below using a 9mm Flat Spline attached to the Fabric and slide along Panel Bar. Once the Fabric has been inserted into position replace the end cap and fasten end cap screw.

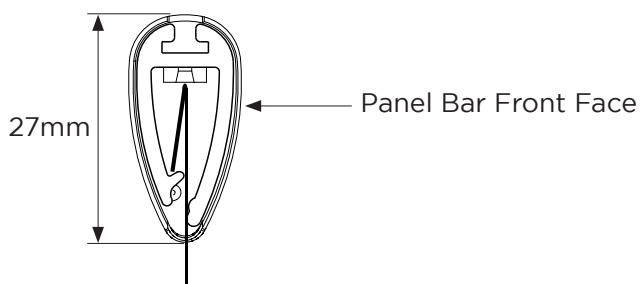

The Panel Bar & Bottomrail both use 9mm flat spline to attach fabric.